


SignalFire Sentinel Modbus Interface

Model: SENTINEL-PA-XXXX

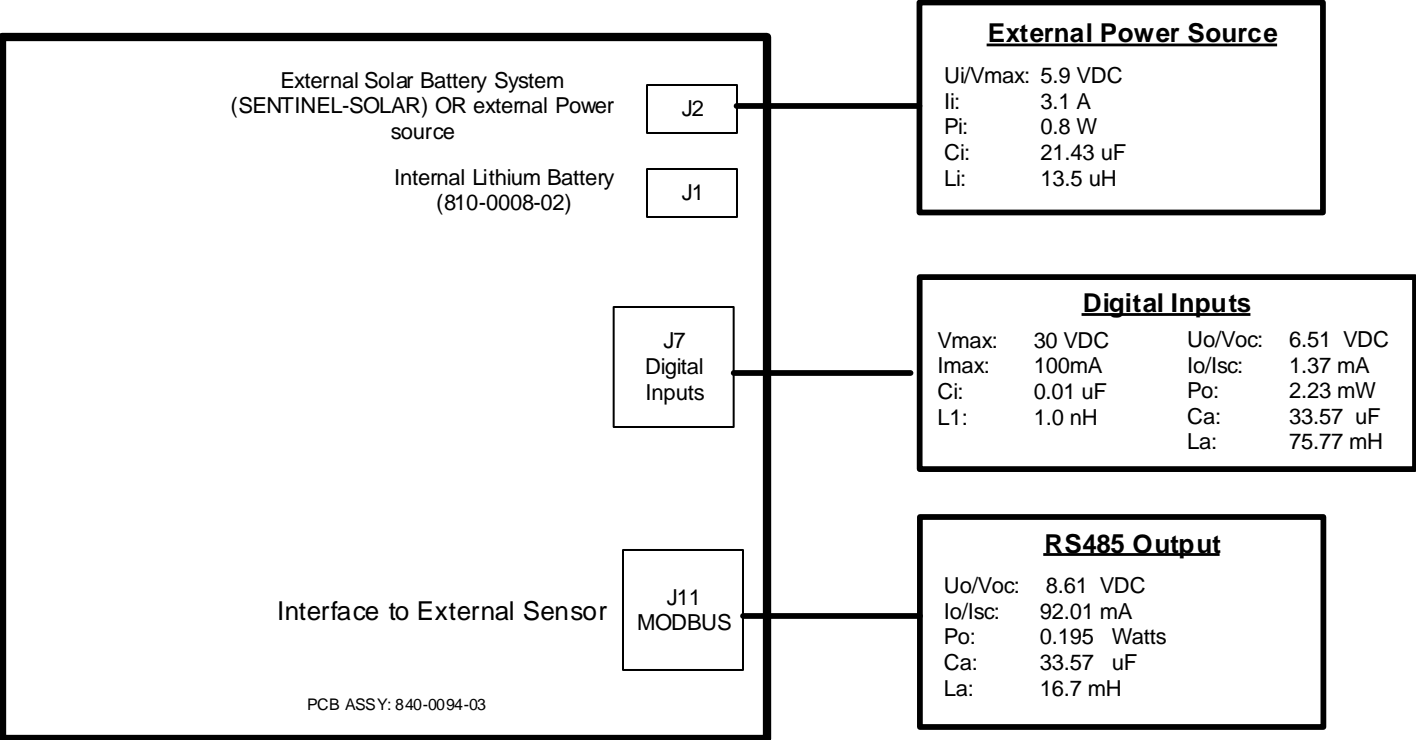

WARNING: Connect only the internal battery pack OR the external solar system/external power source

<h1>SignalFire Telemetry</h1>		
Part Name	Control Drawing, Sentinel Modbus/2DI	Date 4/19/16
Part Number	960-0076-01	Rev 2.4
Page 1 of 1		

Class I, Division 1, Groups C and D	Ambient Temperature Limit: -40C to +60C Temperature Code: T3
<ul style="list-style-type: none"> • WARNING: Substitution of components may impair intrinsic safety. • Choose peripheral devices and associated apparatuses such that the following conditions are met: $U_i/V_{max} \geq U_o/V_{oc}$ $I_i/I_{max} \geq I_o/I_{sc}$ $P_i \geq P_o$ $C_o/C_a \geq C_i + C_{cable}$ $L_o/L_a \geq L_i + L_{cable}$ • When replacing the internal battery, only use SignalFire lithium battery model number 810-0008-02 • See SignalFire Instruction manual number 960-0080-01 for installation requirements • Install the internal battery pack only when external power is not used 	