

Interface Manual

Sentinel Solar System

SignalFire Number: SENTINEL-HCSOLAR



Sentinel Solar system shown with mounting bracket kit and Sentinel Wireless Node

The SignalFire C1D1 Solar System is an Intrinsically Safe device with the following features:

- Complete battery and solar charging system
- Integrated mounting bracket for mounting on a horizontal or vertical pole
- High efficiency solar charging circuit
- Fully encapsulated battery pack and charging circuit

Specifications

Panel Size	9.5" tall × 8.0" wide
Panel Power	4.0 Watts
Battery Capacity	9.0 Amp-Hr
Output Voltage	3.3-5.0VDC
Peak Current	80mA
Certified Temperature Range	-40°C to +60°C
Compliance	Certified for use in Class I, Division 1 groups C and D. EXi [EXi] Intrinsically Safe



WARNING: Use of this equipment in a manner not specified by the manufacturer may impair the protection provided by the equipment.




WARNING: The use of any parts not supplied by the manufacturer violates the safety rating of the equipment.

*The associated apparatus provides intrinsically safe outputs.
L'appareil associé fournit des sorties à sécurité intrinsèque.*



WARNING: If the solar system is used the internal battery source may not be connected!

SignalFire Telemetry		Hudson, MA USA www.signal-fire.com	S/N: 00000001
Model: SENTINEL-SOLAR-9.0			
	CLASS I, DIVISION 1 GROUPS C, D TEMP CODE: T3 AMBIENT TEMP: -40°C to +60°C	ENTITY PARAMETERS Exi [Exi]	
	CONFORMS TO UL STD 913 CERTIFIED TO CAN/CSA STD C22.2 NO. 157	OUTPUT: Voc = 5.9 Vdc Isc = 3.06 A Pout = 0.8 W Ca = 999.9 uF La = 38.18 uH	
INTRINSICALLY SAFE SECURITE INTRINSEQUE	WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY	AVERTISSEMENT: LA SUBSTITUTION DE COMPOSANTS PEUT COMPROMETTRE LA SECURITE INTRINSEQUE	

Connection to Sentinel Node

Sentinel Compatibility

The current available from the solar system is limited due to the IS certification so the solar system may not be used for all Sentinel node configurations.

The following configurations are supported:

- Sentinel Digital
- Sentinel HART
- Sentinel Analog in 1-5V mode (with a sensor power draw of less than 8mA)
- Sentinel Modbus (with a sensor power draw of less than 10mA)
- Sentinel Turbine
- Sentinel Thermocouple

Note: The Sentinel Solar cannot be used with a Sentinel Analog operating in 4-20mA mode.


Wiring Requirements

To ensure intrinsic safety is maintained it is required that the installer follow these guidelines when connecting sensors to the SignalFire node.

The sentinel node must be purchased for use with the solar system. The “solar ready” Sentinel node has a cable gland for the power cable. This should be routed away from any sensor wires entering the Sentinel node.

See pictures for proper wire routing examples.

- The solar power cable must enter through the cable gland
- All wiring should be neat and orderly

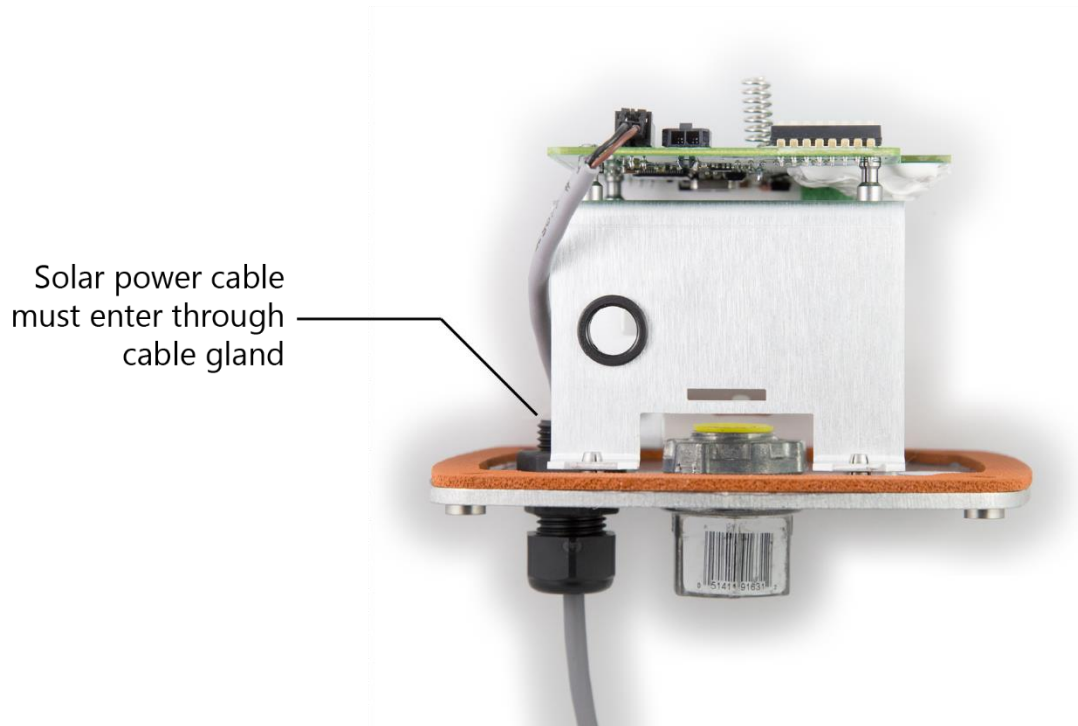


Mounting

The solar system comes on a mounting bracket which may be mounted to either a horizontal or vertical pole using hose clamps. The tabs on the bracket may be bent to fit around the pole. Alternatively, U-bolts can be placed through the holes in the rear of the bracket for pole mounting.

The system should be installed with the solar panel facing south with a good view of the sky.

Mount the system so that the mounting side of the triangle is vertical and the battery box is at the bottom.

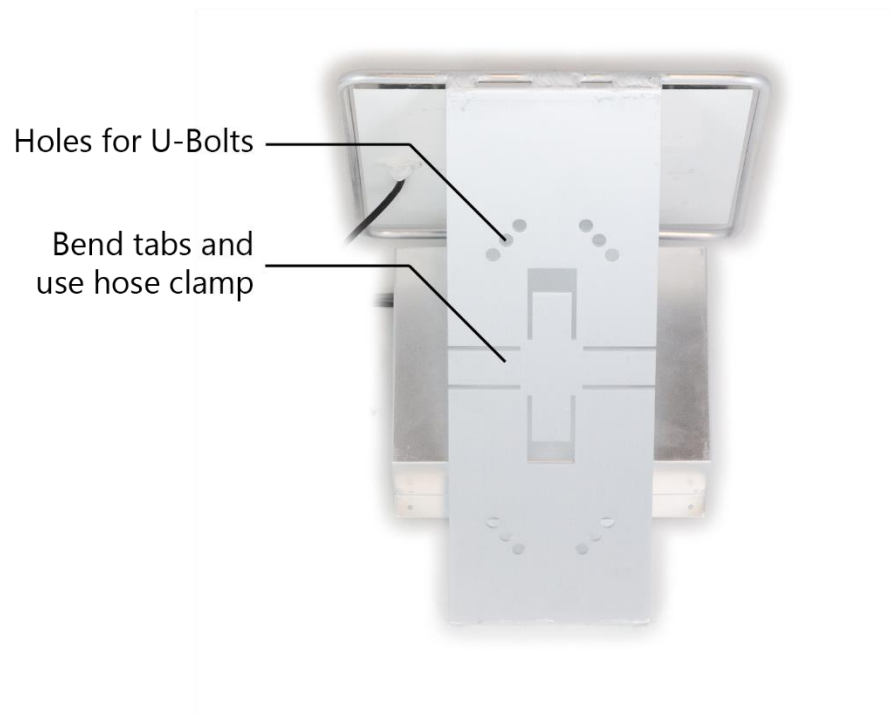

SignalFire also supplies a variety of mounting kits for various sensors. Contact SignalFire or visit <http://www.signal-fire.com/sentinel-bracket-kits/> for information.

Cleaning Instructions

The solar panel and bracket may be cleaned with water, mild soap, and a damp cloth as needed. High pressure washing is not recommended.

Technical Support Contact Information

SignalFire Telemetry

140 Locke Dr

Suite B

Marlborough, MA 01752

(978) 212-2868

support@signal-fire.com

Revision History

Revision	Date	Changes/Updates
1.1	10/09/12	Initial release
1.2	6/20/13	Added detail on compatible Sentinel models. Added mounting detail.
1.3	11/7/14	Updated entity parameters
1.4	6/22/15	Updated design
1.5	11/14/18	Removed obsolete 4.5A-Hr unit